


STEP BY STEP SANITIZATION INSTRUCTIONS

1

- The vehicle's ignition must have been on within 5 minutes of activating the TransMist system.

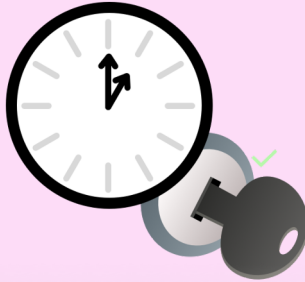

2



- Shut off the vehicle's ignition and proceed to the back of the bus.
- You have 5 minutes to turn the key in the back of the bus to activate the TransMist System.
- When the key is turned, you will hear a beep, and the arming button in the front of the bus will light up.


PAGE 1

3



- Within the next 5 minutes push the blue lit button at the front of the bus.

- Your custom settings will determine the duration before the spray begins, but you can expect the following:
 - There will be a short beep and a red warning light will flash.
 - Halfway through the allotted time, the beeping and flashing will speed up.

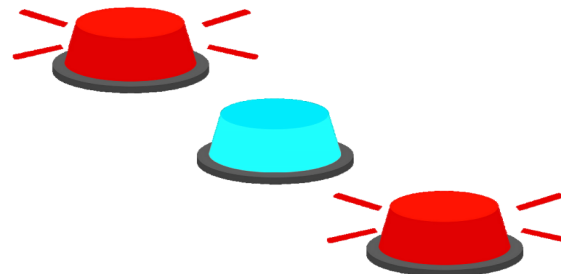

PAGE 2

4

- The beep and light becomes constant when the pump is running (and the spray is in process).




- Turn the ignition key on at any time to disengage the system.


PAGE 3

SYSTEM LAYOUT

This layout map indicates where the key and light/button are located on a standard install.

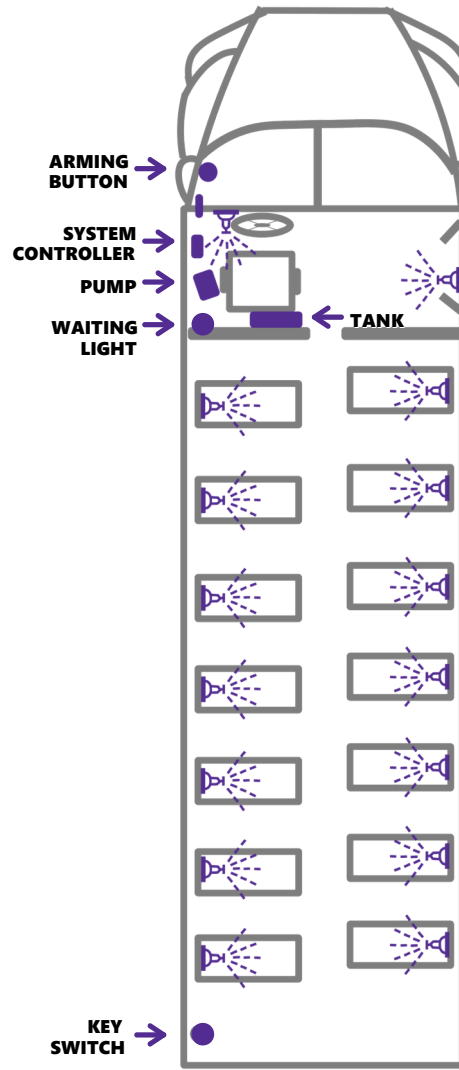

- Once the spray process is complete, the beeping stops. The red light continues flashing to signify that the wind-down process and dry cycle have begun. (The duration of this process depends on your custom settings.)
- When the drying cycle is completed, the blue button light will illuminate, indicating that the system has completed a cycle.

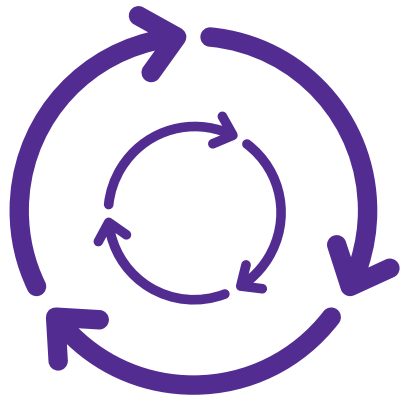

TRANSMIST

INSTRUCTIONAL MANUAL

VEHICLE SANITIZATION

TRANSMIST.COM

856-488-6182